






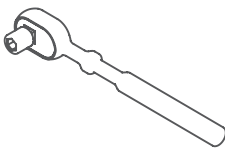

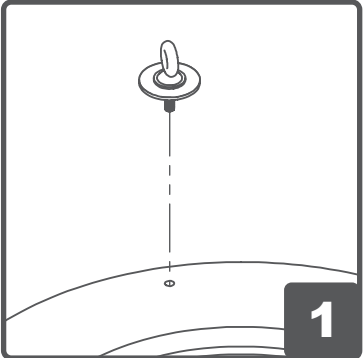
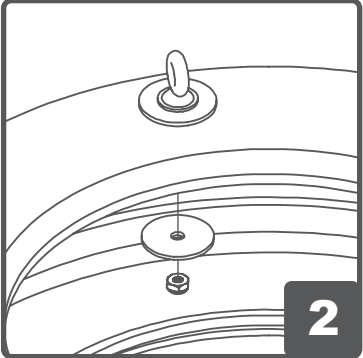
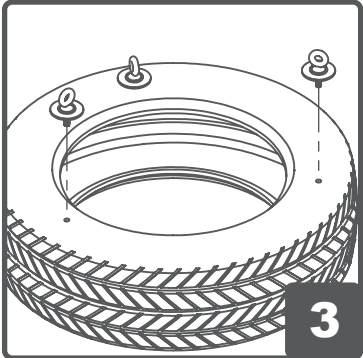

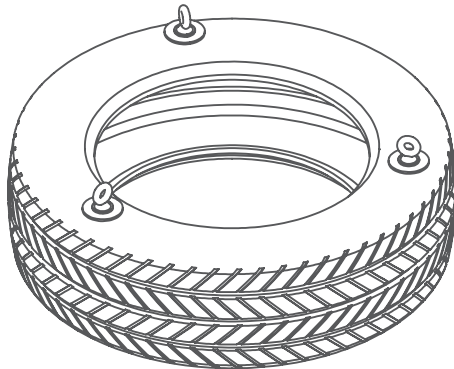


Installation Guide

Tire Eye Bolts (SSS-0065-P)

Part List	Tools					
 X3  X3  X3		 Gloves	 Safety Glasses	 Electric drill	 Dia 10 mm Drill	 Ratchet
Recommended accessories						
 X1	 1 Drill three holes 120 degrees apart. Put the tire eye bolts through the holes.	 2 Fasten it from the inner tire with washer and nut.	 3 Repeat the step 1 and 2 to complete the whole assembly.	 Finish	 Finish	